



Features and Benefits

- With a 260 lb. and 440 lb. lifting capacity, the Zeus is the most powerful boom lift in the world
- Beautifully engineered to complement your vehicle
- Highly adjustable to fit most vehicles
- Ideal for power chairs, mobility scooters and manual wheelchairs
- Tailored fitting kit
- Easily removed when not in use and easily transferable from one vehicle to another
- Remote control powered by the vehicle battery
- Standard in Carbon Grey

Specifications

Model/SWL	260 lbs.	440 lbs.
Lifting arm weight	22 lbs.	29 lbs.
Power supply	12 Volt DC	
Max current draw	22 Amps	
Product materials	Aluminum and mild/stainless steel	
Material finish	Powder coated - Carbon Gray, Brilliant Blue and Radiant red	



Locate a Dealer

Phone: (888) 570-1113 (Beamsville, Ontario)

Email: info@pridemobility.com • **Web:** pridemobility.com



Designed and engineered to provide unparalleled freedom and mobility

What would you do with your newfound freedom?



With the Zeus, you have the independence and freedom you need to enjoy life and live without limits. Make the most of the little things you struggled to do before like travel, go shopping, visit friends and much more.

1 Power the Zeus out of the vehicle and lower it down to the mobility device



2 Connect by lifting the two keyhole plates to the lifting bracket



3 Lift the mobility device and rotate it into the trunk of the vehicle



4 Position the mobility device in the trunk and lower it down onto the floor



When not in use, the Zeus can be removed allowing almost full use of the trunk

1 Choose Your Mobility Device



Wheelchair



Small Scooter




Large Scooter



Power Chair


2 Select your Appropriate Docking Device

Two Point Keyhole Bracket Spreader Bar

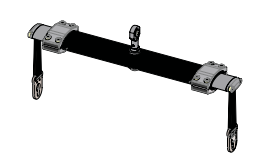

For lifting power chairs

Two Point Karabiner Spreader Bar

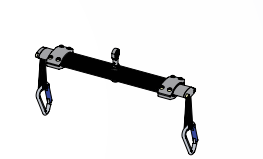

Locate the eye hole bracket/mounting

Four Point Keyhole Bracket Spreader Bar



Normally on the frame or seat assembly

Four Point Karabiner Spreader Bar



Snap the Karabiner onto the eye hole bracket

3 Color



Carbon Gray

Fitting kits are available for most makes and models