

ULTRALEATHER®

Touch the Future™










Takumi™ Technology

Takumi[™] Technology is proprietary to Ultraleather® and makes up the DNA of every roll leaving the mill. It is is the only process able to achieve the premium quality of Ultrafabrics.

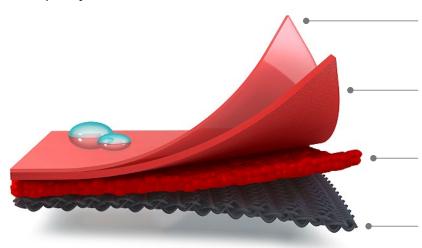

PROTECTIVE SURFACE LAYER

Adds extreme durability with ease of care and low maintenance. Protects from stains. Allergen and odor free. Liquid and moisture repellent.

TOPSKIN LAYER

Unique polycarbonate resins engineered for maximum hydrolysis resistance. Azo-free pigment for lasting color vibrancy.

MICROFOAM LAYER

Polycarbonate foam structure for added comfort. High moisture transfer provides ultimate thermal comfort for body climate regulation.

SUBSTRATE

Reinforced rayon fibers provide dimensional stability. Superior foundation delivers high performance and upholstery ease.

Taking its meaning from the Japanese word 'artisan,' this innovative process engineers mastered performance directly into each layer – combining them into one unified system that assures enduring bond strength and longevity.

Distinctive Characteristics

- Industry leading 14+ weeks hydrolysis results
- Reinforced rayon backing
- 400,000 double rubs in the Wyzenbeek Test
- SCS Indoor Advantage Gold Certification
- Meets Healthier Hospitals Safer Chemical Challenge, V2.0



1) Pride® Power Lift Recliners are FDA Class II Medical Devices designed to aid individuals with mobility impairments.



