

3-Wheel

| | |
|---|---|
| Model Number | R3-1700 |
| Weight Capacity | 400 lbs. |
| Maximum Speed ¹ | Up to 14 mph |
| Ground Clearance ³ | 3.5" at center of frame, 1.37" at anti-tip, 6.18" at highest point |
| Turning Radius ³ | 60" |
| Overall Length ³ | 59" |
| Overall Width ³ | 27.12" |
| Seat-to-Ground Height ³ | 28" |
| Seat-to-Deck Height ³ | 19" |
| Front Tires ³ | 3" x 16" tubeless pneumatic |
| Rear Tires ³ | 3" x 16" tubeless pneumatic |
| Suspension | Front and rear |
| Range Per Charge ^{1,2} | Up to 19 miles at 400 lbs. at full speed Up to 31 miles at 220 lbs. at low speed |
| Total Weight ⁵ | Without batteries: 208 lbs. With batteries: 314 lbs. |
| Heaviest Piece When Disassembled ³ | Unit does not disassemble. Weight includes seat, base and batteries. |
| Standard Seating ³ | Type: Limited reclining high back with headrest Weight: 37 lbs. Material: Black vinyl Dimensions: Width: 20", Depth: 18" |
| Drive System | Rear-wheel drive sealed transaxle with 24-volt DC motor |
| Dual Braking System | Regenerative and electromechanical |
| Battery Requirements ^{4,6} | Size: (2) 75 AH Weight: 53 lbs each |
| Battery Charger | 8 amp, off-board |
| Warranty | Frame: lifetime limited Drivetrain: 2-year limited Electronics: 2-year limited Battery: 6-months |

†Non-Medical Device

This product is not a medical device and is not intended to assist, treat, diagnose, or alleviate any medical condition or disability.

- 1 Varies with user weight, terrain type, battery amp-hour (AH), battery charge, battery condition, and tire condition. This specification can be subject to a variance of (+ or -) 10%.
- 2 Tested in accordance with ANSI/RESNA, MC Vol2, Section 4 & ISO 7176-4 standards. Results derived from theoretical calculations based on battery specifications and drive system performance. Test conducted at maximum weight capacity.
- 3 Due to manufacturing tolerances and continual product improvement, this specification can be subject to a variance of (+ or -) 3%.
- 4 Battery weight may vary based on battery manufacturer.
- 5 Includes standard seat weight.
- 6 AGM or gel cell type required.

PRIDE
MOBILITY
LIVE YOUR BEST®

(US) 800-800-8586 • (Canada) 888-570-1113

pridemobility.com |    

NOTE: All specifications subject to change without notice. The information contained herein is correct at the time of publication; we reserve the right to alter specifications without prior notice. Speed and range vary with user weight, terrain type, battery charge, battery condition and tire pressure. Due to manufacturing tolerances and continual product improvement, length, width, turning radius and ground clearance can be subject to variance of + or - 3%. Special order seats or non-standard dimensions will not be fold-flat and depth-adjustable.

0003682_RAPTOR_111521



IT'S THE
**RIDE OF A
LIFETIME**



Non-Medical Device†

LIVE YOUR BEST®

pridemobility.com |    

EXPERIENCE A SMOOTHER RIDE OVER VARIED TERRAIN



20" x 18"
Limited recline
fold-flat seat
with manual
adjustment and
angle/width
adjustable
armrests

Hand brake

LCD digital display

Front storage
compartment
on tiller

Interchangeable front
shrouds with multiple
color options


Non-Medical Device†

Enjoy fast speed and advanced safety features, all in one sleek package! **The Pride® Raptor** cruises up to 14 mph and is equipped with a full LED lighting package and a regenerative braking system.

Additional Features

- Easy-to-read LCD console which shows estimated speed, mileage and battery display
- Front and rear suspension
- XLR USB charger included
- Hand brake with regenerative braking system
- Sleek and solid design for enhanced stability
- Tubeless pneumatic tires for a smooth ride
- Two rearview mirrors
- Under seat storage is equipped with seat support rod

Available front shroud colors**

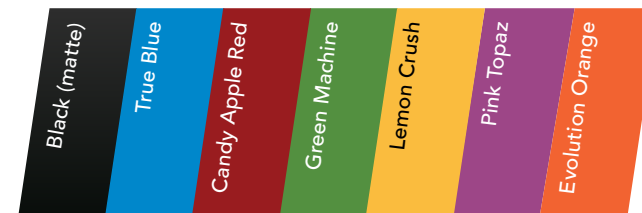

Accessories*

- Cup holder
- Cane/crutch holder (single, double)
- Forearm crutch Holder
- Oxygen tank holder
- Quad cane Holder
- Rear basket
- Saddle bag
- Safety flag
- Walker holder
- Weather cover
- Wishbone crutch holder

Military Patches



**Each unit comes standard with one color insert.

*Only one rear accessory can be used at a time.



Front LED light package



LED brake lights and turn signals



Secure, lockable, under seat storage